


### IR086S APT. STATION

TERMINAL-1	BROWN
TERMINAL-2	GREEN
TERMINAL-3	GREY
TERMINAL-4	BLACK
TERMINAL-5	YELLOW
TERMINAL-6	RED

#### INSTALLATION GUIDELINES and GENERAL INFORMATION:

1. All low voltage wiring is #22 AWG, unless otherwise noted.
2. See system wiring diagram for balance of system wiring information.
3. Observe all local and national electrical codes.
4. All terminals connections shown may not be in the order that they appear on the equipment.
5. **NOTE:** When using the plug-in connector and not the pigtailed provided, make sure you tape up the ends of the pigtailed so they do not short against anything or to themselves!

 <p>42 Central Drive, Farmingdale NY 11735-1202          (631) 777-5500 Fax: (631) 777-5599  <b>TOLL-FREE Technical Line 1-800-666-4800</b>          Email: info@alpha-comm.com</p>	<p style="text-align: center;"><b>TYPICAL WIRING DIAGRAM FOR          IR086S Apt. Intercom Station showing          connections to existing 3311 type station(s).</b></p>
--	---